

Technical Bulletin #221024

PVC 103-R Trap Adapter - Male

The PVC 103-R trap adapter male is designed to fit inside a DWV P-Trap hub and accept a 1-1/2" or 1-1/4" tubular pipe.

Assembly of 1-1/4" Chrome or Plastic Tubular Pipe and Trap Adapter:

1. Unthread nut from trap adapter.
2. Remove instructional insert.
3. Place the nut on the pipe.
4. Place provided two-in-one washer on pipe – to desired length.
5. Insert pipe with washer and nut into trap adapter.
6. Hand tighten, plus approximately one turn.




"You can't beat the system" is a registered trademark of Charlotte Pipe and Foundry Company. ©2022 Charlotte Pipe and Foundry Company

You can't beat the system.®

Assembly of 1-1/2" Chrome or Plastic Tubular Pipe and Trap Adapter:

1. Unthread nut from trap adapter.
2. Remove instructional insert.
3. Place the nut on the pipe.
4. Separate the provided two-in-one washer; do not use the black washer.
5. Place white/clear washer on pipe.
6. Insert pipe with washer and nut into trap adapter.
7. Hand tighten, plus approximately one turn.

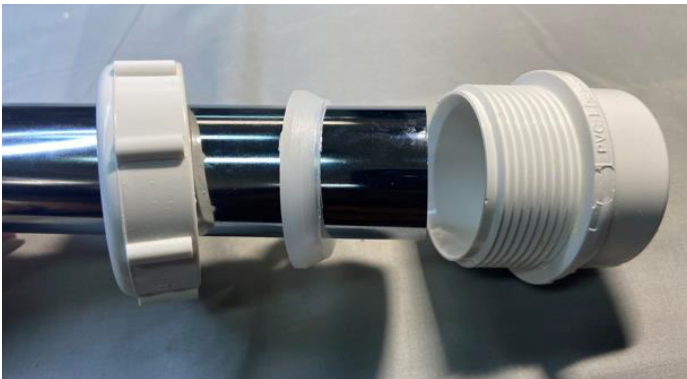

Important Notes:

- Never use thread sealant when installing a p-trap or a trap adapter with plastic or metallic nut. Use of thread sealants could cause seal separation or cause damage to the fitting through over-tightening.
- Exceeding recommended torque for threaded connections may result in component damage, system failure, and property damage.
- Always hand tighten threaded connections, plus approximately one turn. Plastic or metal nuts should be tightened with a strap wrench only. Never use common wrenches or tools designed for metallic pipe systems.